



Presto
INSTRUMENTS

HOW TO CLEAN YOUR TRUMPET!



1) Buy a cleaning kit. This should contain:

- i. Cleaning snake brush
- ii. Polishing Cloth
- iii. Valve Oil
- iv. Slide Grease

(You can buy these items from any major music store)

2) Run a warm bath. Add a capful of “Disinfectant”

3) Remove all slides and valves from your trumpet.

4) **DO NOT** put the valves in the water.

5) Immerse the trumpet with slides separated into the bath tub. Allow to soak for up to 2 hours.

6) Run the cleaning snake through the trumpet to remove built up grime.

7) Allow the trumpet to drain overnight.

8) Re-assemble your trumpet, re-oiling the valves and re-greasing the slides.

9) Polish the exterior of the trumpet.

Note: If you are going away on holidays or cannot play your trumpet for an extended period of time, disassemble the trumpet or it will seize up!

- i. Remove the valves and slides
- ii. Clean your trumpet every 1-2 months.

Respect your trumpet and keep it in proper working order!

Address PO Box 111 Willoughby NSW 2068

Email sales@prestoinstruments.com.au

Phone Alex 0404 494 487 · Lee 0414 448 545